


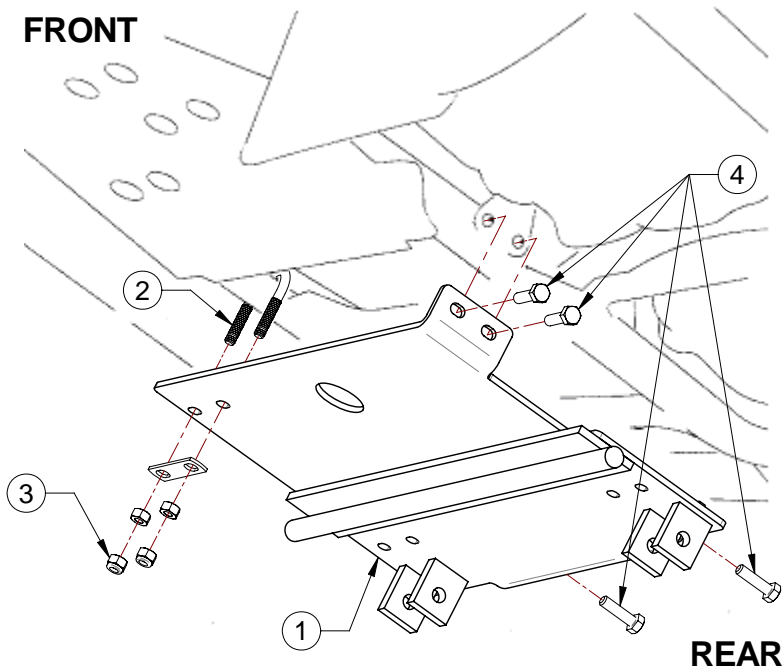

ADAPTER
INSTALLATION

1. Remove and keep the bolts (# 4) retaining the original protective rear plate.
2. Fasten the right front part of the adapter (# 1) onto the frame of a one (1) U-bolts assembly 5/16" NC x 1 3/8" x 2 1/4" (# 2) and two (2) self-locking nuts 5/16" NC (# 3), **without tightening**.
3. Fasten the left front part and the rear part of the adapter (# 1) onto the frame using the four (4) original bolts (# 4) removed at step 1. Secure all nuts and bolts.




Parts list

Ref.	Description	Item # (OEM)	Qty.
1	Adapter	00PS-100	1
2	U-bolt assembly 5/16" NC x 1 3/8" x 2 1/4"	UB5/16x1-1/8x2-1/4	1
3	Self-locking nut 5/16" NC	HLN-5/16-18NC	2
4	Bolts of ATV		



INSTALLATION
PLAQUE ADAPTEUR

1. Enlevez et conservez les boulons (# 4) qui retiennent la plaque arrière au châssis du VTT.
2. Fixez l'avant droit de la plaque adaptateur (# 1) au châssis du VTT avec un (1) boulon en "U" assemblé 5/16" NC x 1 3/8" x 2 1/4" (# 2), et de deux (2) écrous nylon 5/16" NC (# 3), sans serrage.
3. Fixez la partie avant gauche et la partie arrière de la plaque adaptateur (# 1) au châssis du VTT à l'aide des quatre (4) boulons (# 4) d'origine enlevés à l'étape 1. Resserrez tous les boulons fermement.

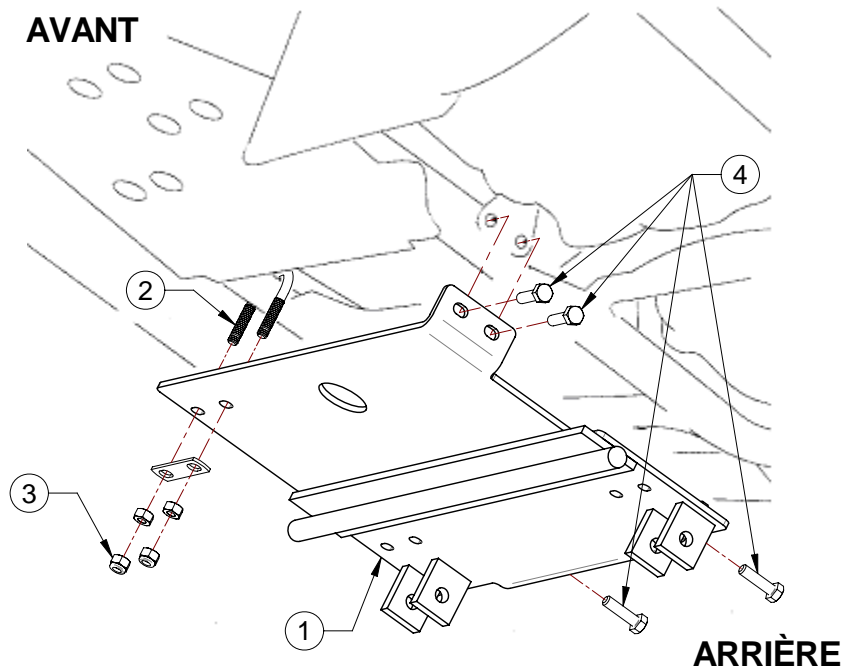

Liste de pièces

Réf.	Description	# de pièce (OEM)	Qté.
1	Plaque adaptateur	00PS-100	1
2	Boulon en "U" assemblé. 5/16" NC x 1 3/8" x 2 1/4"	UB5/16x1-1/8x2-1/4	1
3	Écrou nylon 5/16" NC	HLN-5/16-18NC	2
4	Boulons du VTT		