


**INSTALLATION**  
**PLAQUE ADAPTEUR**

1. Fixez l'arrière de la plaque adaptateur (# 1) au tube du châssis du VTT avec deux (2) boulons en "U" assemblé 1/4" NC x 1 1/8" x 2 1/4" LG (# 2) et de quatre (4) écrous nylon 1/4" NC (# 3), **sans serrage**.
2. Fixez l'avant de la plaque adaptateur (# 1) aux supports de l'aile du VTT avec quatre (4) boulons hex. 5/16" NC x 2" LG (# 4), de quatre (4) rondelles plates 1/4" DIA. (# 5) et de deux (2) supports de fixation filetés (# 6). Resserrez tous les boulons et écrous fermement.

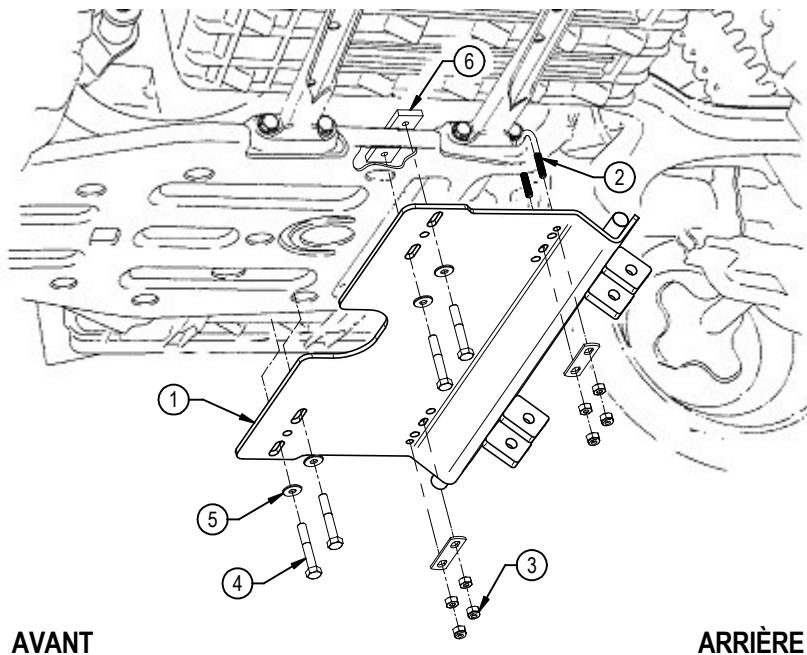


**Liste de pièces**

Réf.	Description	# de pièce (OEM)	Qté.
1	Plaque adaptateur	00PS-131	1
2	Boulon en "U" assemblé 1/4" NC x 1 1/8" x 2 1/4" LG	UB1/4x1-1/8x2-1/4	2
3	Écrou nylon 1/4" NC	HLN-1/4-20NC	4
4	Boulon hex. 5/16" NC x 2" LG	HB-5/16-18NCx2	4
5	Rondelle plate 1/4 USS Zinc B	FW-1/4-USS	4
6	Support de fixation fileté	04FP-003	2

## **ADAPTER** **INSTALLATION**

1. Fasten the rear part of the adapter (# 1) onto the tube of the frame using two (2) U-bolts assembly 1/4" NC x 1 1/8" x 2 1/4" LG (# 2), and four (4) self-locking nuts 1/4" NC (# 3), **without tightening**.
2. Fasten the front part of the adapter (# 1) onto supports arms using the four (4) hex. bolts 5/16" NC x 2" (# 4), four (4) Flat washer 1/4" DIA. (# 5) and two (2) threaded supports (# 6). Secure all nuts and bolts.

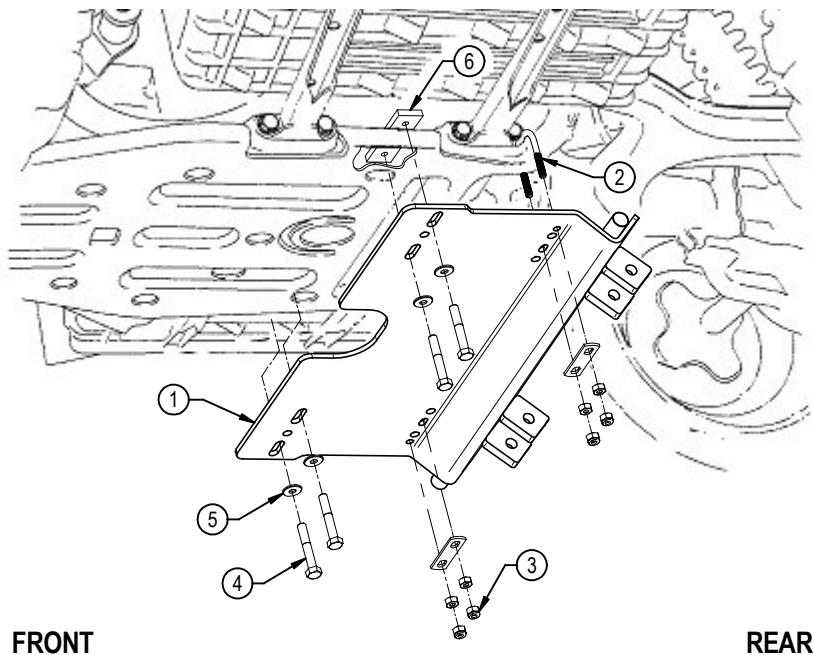

**Parts list**

Ref.	Description	Item # (OEM)	Qty.
1	Adapter	00PS-131	1
2	U-bolt assembly 1/4" NC x 1 1/8" x 2 1/4" LG	UB1/4x1-1/8x2-1/4	2
3	Self-locking nut 1/4" NC	HLN-1/4-20NC	4
4	Boulon hex. 5/16" NC x 2" LG	HB-5/16-18NCx2	4
5	Flat Washer 1/4 USS Zinc B	FW-1/4-USS	4
6	Threaded support	04FP-003	2