



INSTALLATION  
PLAQUE ADAPTEUR

1. Fixez la partie arrière de la plaque adaptateur (FIGURE A, # 1) au châssis du VTT avec deux (2) boulons en "U" assemblés 1/4" NC x 1 1/8" x 2 1/4" (FIGURE A, # 2) et de quatre (4) écrous nylon 1/4" NC (FIGURE A, # 3), sans serrage.
2. Fixez la partie avant de la plaque adaptateur (FIGURE A, # 1) au châssis du VTT avec deux (2) boulons en "U" assemblés 5/16" NC x 1 3/8" x 1 3/4"(FIGURE A, # 4) et de quatre (4) écrous nylon 5/16" NC (FIGURE A, # 5), sans serrage.
3. Resserrez tous les boulons et écrous fermement.

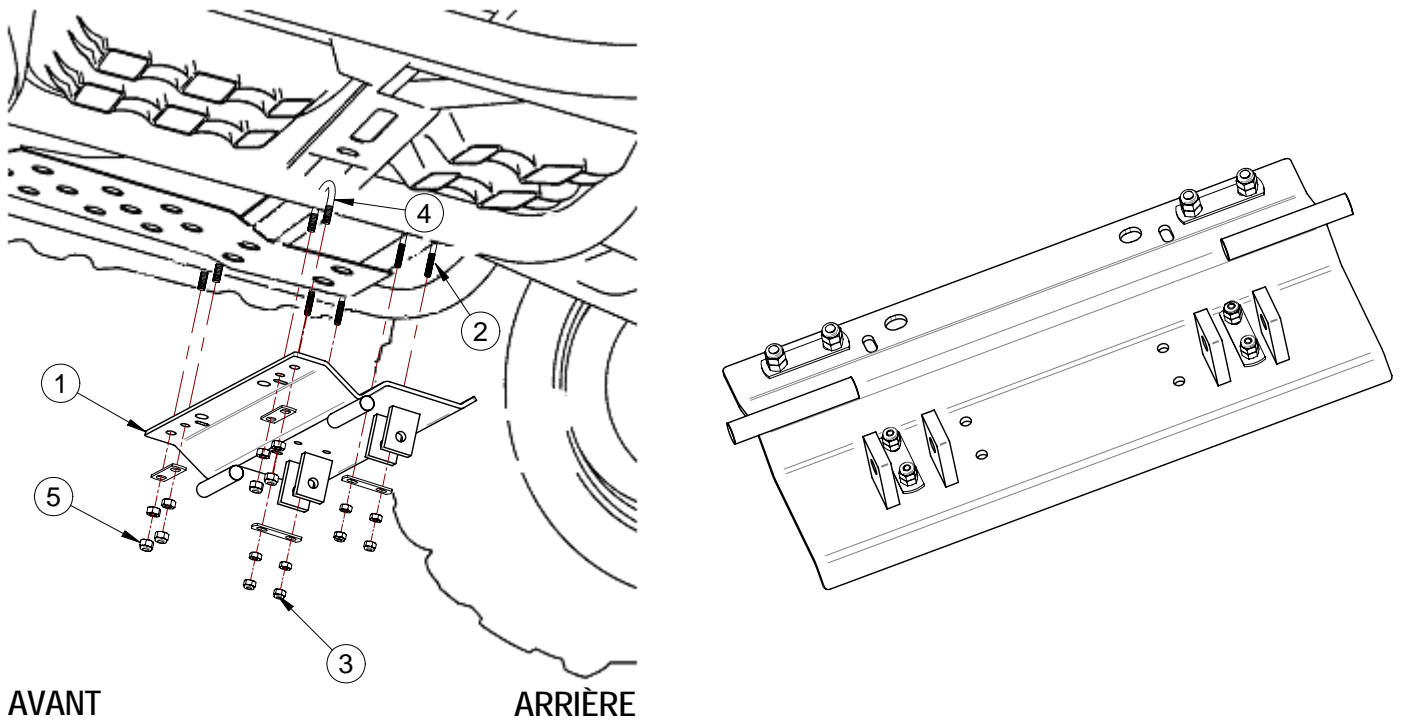


FIGURE A

Liste de pièces

Réf.	Description	# de pièce (OEM)	Qté.
1	Plaque adaptateur	00PS-206	1
2	Boulon en "U" assemblé 1/4" NC x 1 1/8" x 2 1/4"	UB1/4x1-1/8x2-1/4	2
3	Écrou nylon 1/4" NC	HLN-1/4-20NC	4
4	Boulon en "U" assemblé 5/16" NC x 1 3/8" x 1 3/4"(coupé)	00UB-001	2
5	Écrou nylon 5/16" NC	HLN-5/16-18NC	4



ADAPTER  
INSTALLATION

1. Fasten the rear part of the adapter (FIGURE A, # 1) onto the frame using two (2) U-bolts assembly 1/4" NC x 1 1/8" x 2 1/4" (FIGURE A, # 2) and four (4) self-locking nuts 1/4" NC (FIGURE A, # 3), **without tightening**.
2. Fasten the rear part of the adapter (FIGURE A, # 1) onto the frame using two (2) U-bolts assembly 5/16" NC x 1 3/8" x 1 3/4" (FIGURE A, # 4) and four (4) self-locking nuts 5/16" NC (FIGURE A, # 5) , **without tightening**.
3. Secure all nuts and bolts.

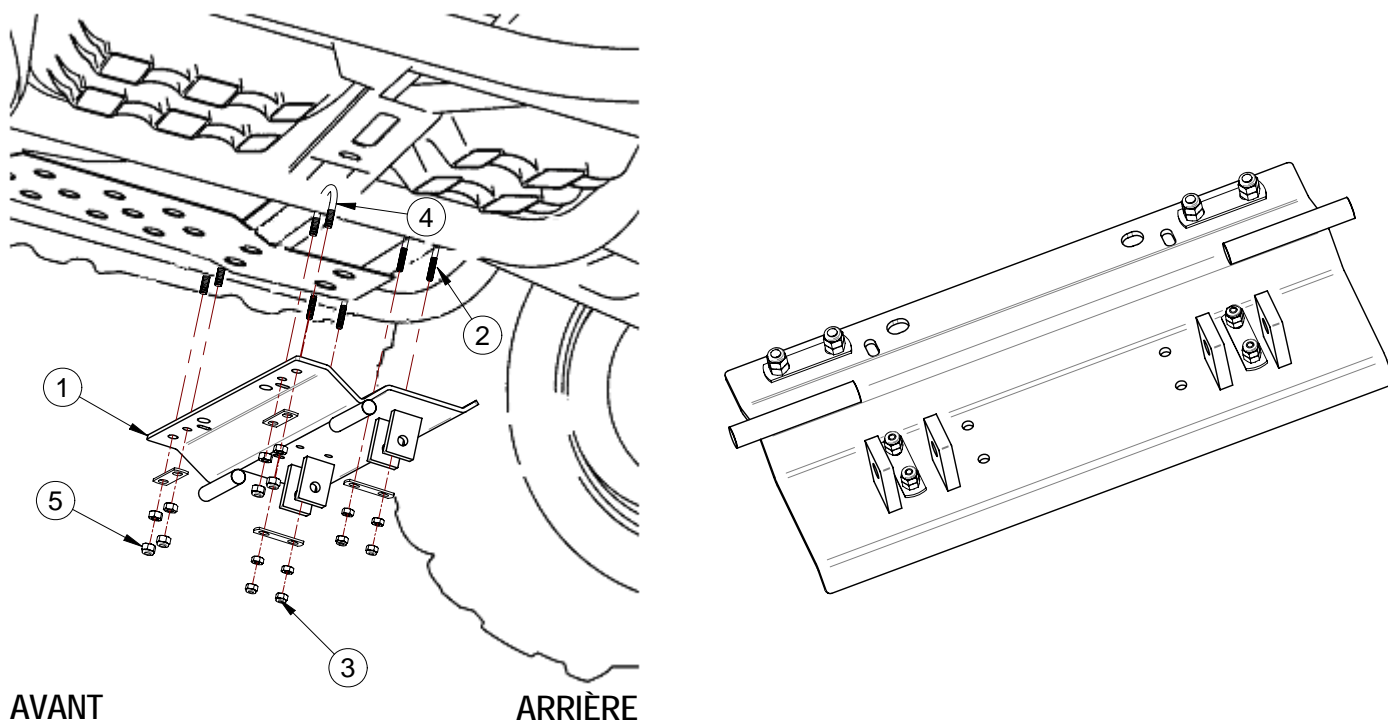


FIGURE A

Parts list

Ref.	Description	Item # (OEM)	Qty.
1	Adapter	00PS-206	1
2	U-bolt assembly 1/4" NC x 1 1/8" x 2 1/4"	UB1/4x1-1/8x2-1/4	2
3	Self-locking nuts 1/4" NC	HLN-1/4-20NC	4
4	U-bolt assembly 5/16" NC x 1 3/8" x 1 3/4" (to cut)	00UB-001	2
5	Self-locking nuts 5/16" NC	HLN-5/16-18NC	4